

PART 4: INSTALLATION INSTRUCTIONS

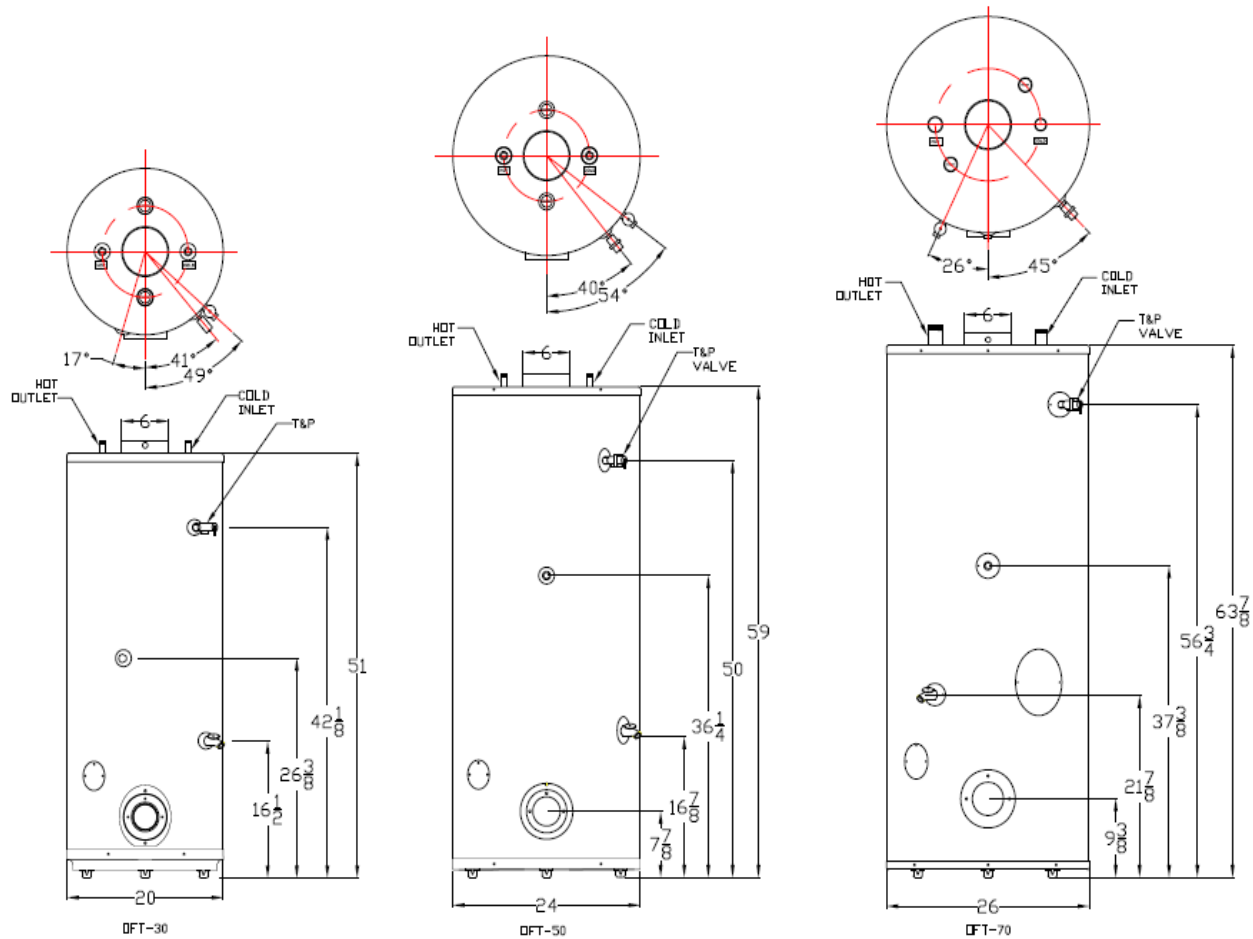


Figure 1 – Installation Instructions

NOTE: Diagrams shown with preferred burner dimensions. Other burners may not go with the tank.

PART 5: LEVELING AND CLEARANCES

A. LEVELING

The heater must be installed level. If it is necessary to adjust the heater, use metal shims under the channel-type skid base.

B. CLEARANCES

Provide ample clearance on all sides for installation, adjustment, and replacement of burner, control components and other serviceable parts, such as the relief valve, power burner, thermostat, and/or drain valve.

NOTE: Minimum clearance to combustible construction is: Sides, 6", Back, 6", Front, 24".

NOTE: If a chimney connector is used, the minimum clearance from the top of the unit to the connector is 18".