

REPLACEMENT PARTS

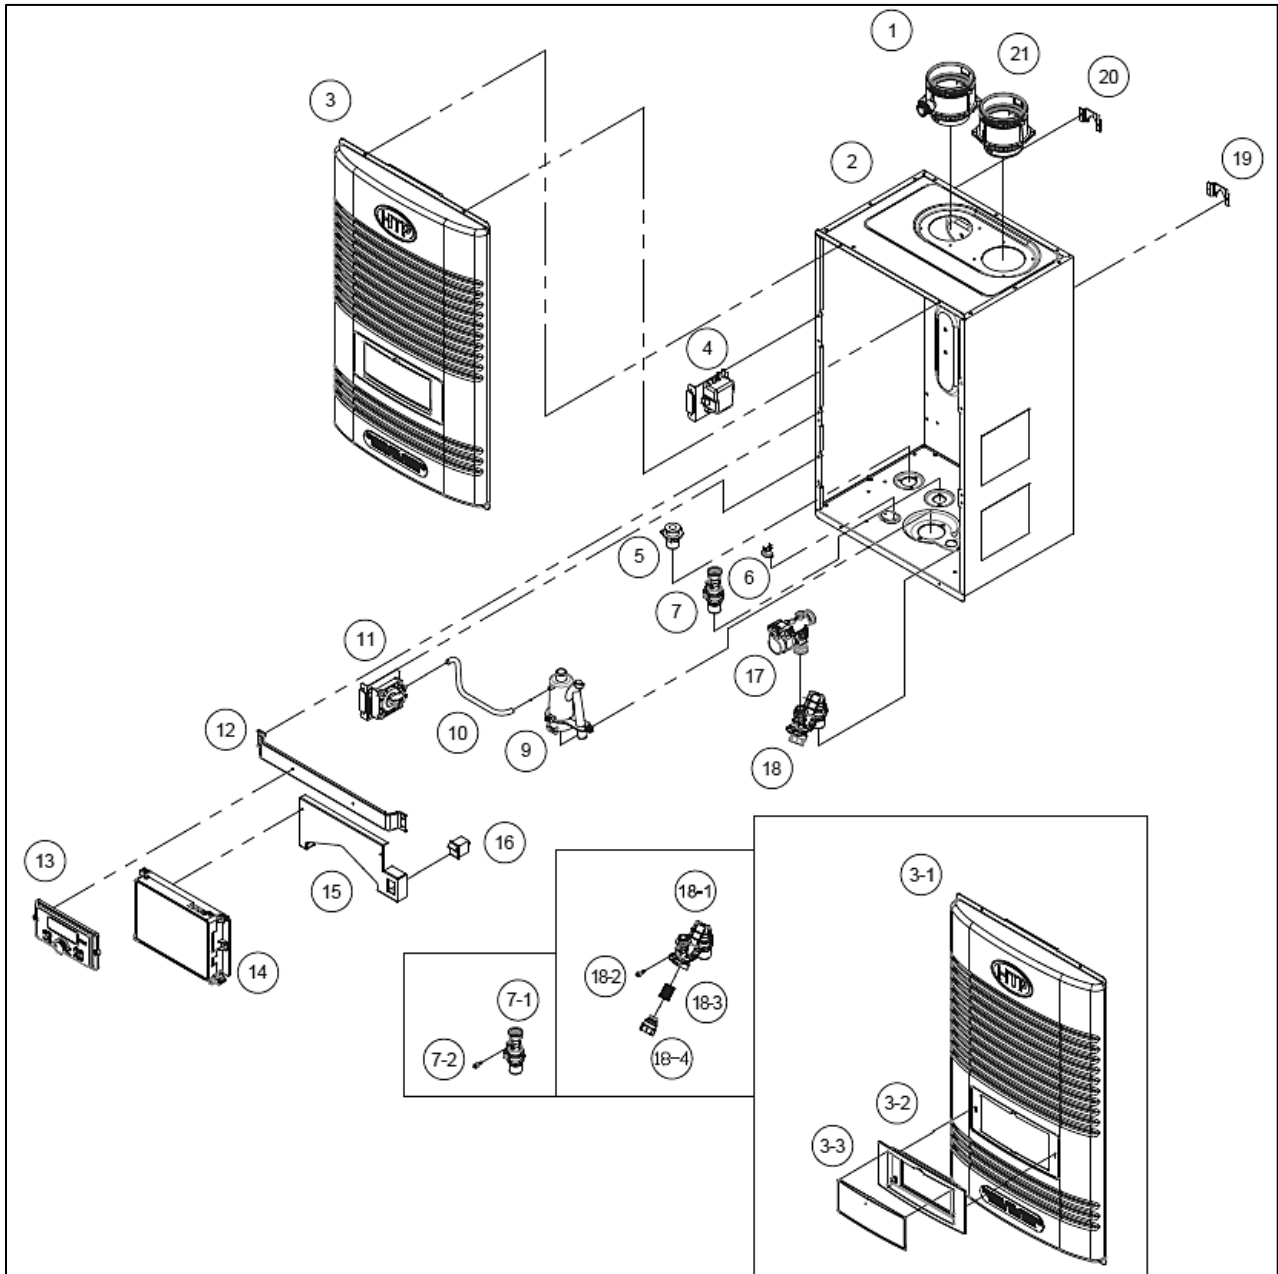


Figure 39 – Cabinet Replacement Parts

NUMBER	DESCRIPTION	PART NUMBER	NUMBER	DESCRIPTION	PART NUMBER
1	EXHAUST ASSY	7850P-021	11	AIR PRESSURE SWITCH	7850P-047
2	CASE	7850P-044	12	DISPLAY BRACKET	7850P-065
3	DOOR ASSY	7850P-025	13	DISPLAY	7850P-057
3-1	FRONT COVER	7850P-062	14	CONTROL	7850P-058
3-2	DISPLAY PANEL BRACKET	7850P-024	15	CONTROL BRACKET	7850P-066
3-3	DISPLAY PANEL	7850P-023	16	ROCKER SWITCH	7850P-059
4	IGNITION TRANSFORMER	7850P-045	17	FLOW CONTROL VALVE	7850P-053
5	GAS INLET NIPPLE	7850P-043	18	WATER INLET VALVE ASSY	7850P-018
6	OVERHEAT SENSOR	7850P-050	18-1	WATER INLET VALVE BODY	7850P-067
7	DHW SUPPLY PIPE ASSY	7850P-020	18-2	WATER INLET SENSOR	7850P-015
7-1	DHW SUPPLY PIPE	7850P-063	18-3	WATER INLET FILTER	7850P-017
7-2	WATER OUTLET SENSOR	7850P-019	18-4	WATER INLET FILTER CAP	7850P-016
8	N/A	N/A	19	CASE BRACKET (LEFT)	7850P-068
9	SIPHON ASSY	7850P-014	20	CASE BRACKET (RIGHT)	7850P-069
10	SIPHON AIR PRESSURE HOSE	7850P-064	21	INTAKE AIR ASSY	7850P-022

Table 26 – Cabinet Replacement Parts

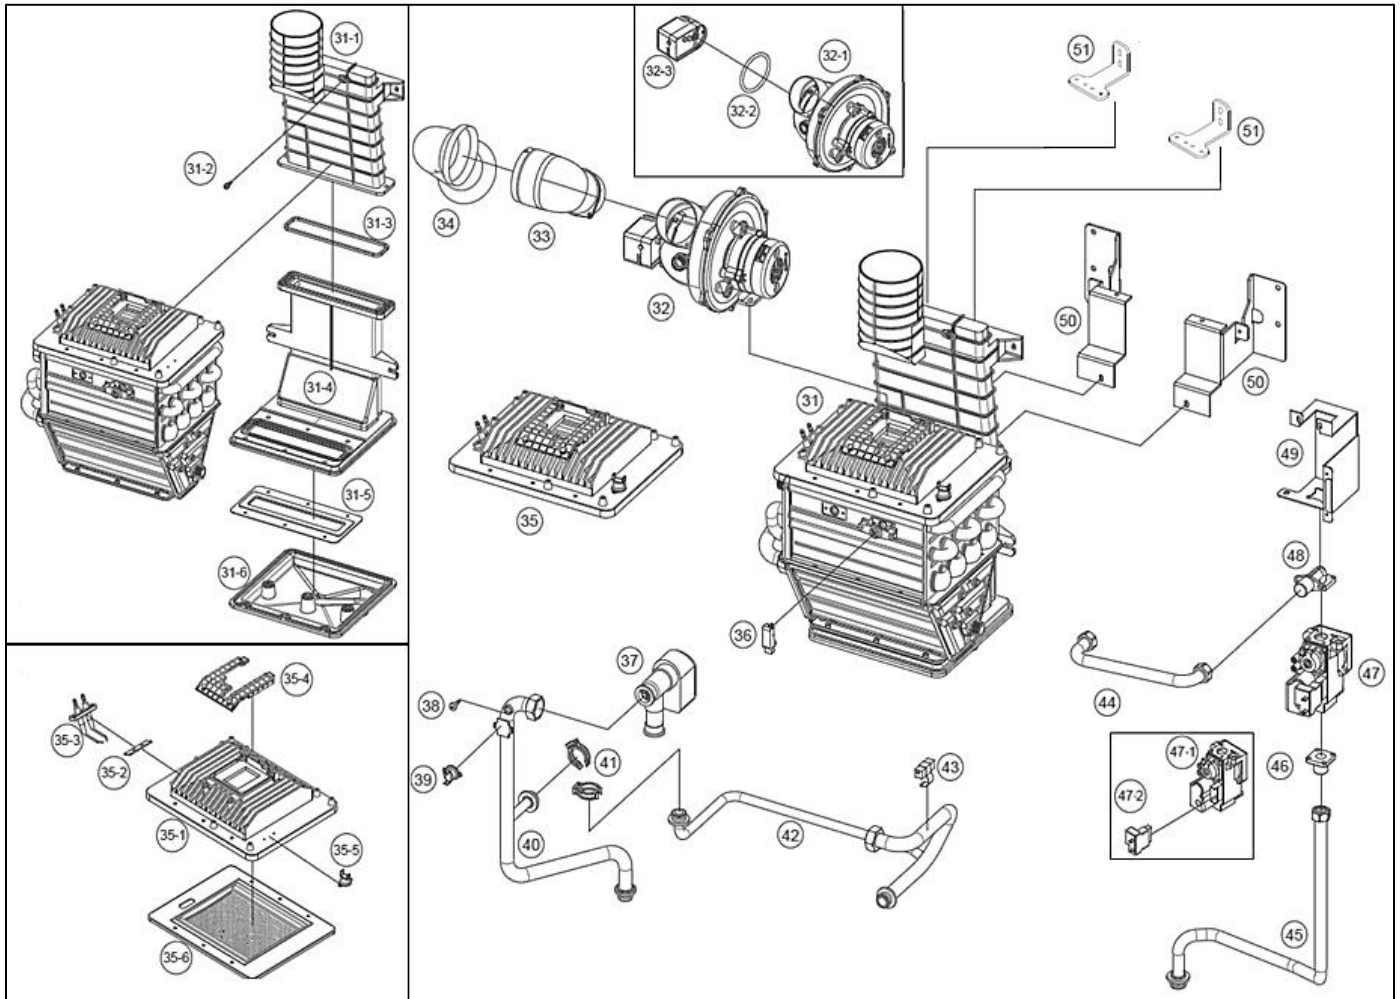


Figure 40 – Heat Exchanger Replacement Parts

NUMBER	DESCRIPTION	PART NUMBER	NUMBER	DESCRIPTION	PART NUMBER
31	HEAT EXCHANGER ASSY	7850P-032	35-6	METAL FIBER	7850P-075
31-1	EXHAUST PIPE ASSY (UP)	7850P-033	36	FLAME DETECTOR SENSOR	7850P-031
31-2	EXHAUST TEMPERATURE SENSOR	7850P-070	37	MIXING VALVE	7850P-054
31-3	EXHAUST GASKET 1	7850P-071	38	WATER TEMPERATURE SENSOR	7850P-081
31-4	EXHAUST PIPE ASSY (DOWN)	7850P-034	39	WATER TEMPERATURE OVERHEAT SENSOR	7850P-051
31-5	EXHAUST GASKET 2	7850P-072	40	DHW OUTLET PIPE	7850P-049
31-6	CONDENSATE GUTTER	7850P-073	41	WATER PIPING CLIP	7850P-055
32	FAN ASSEMBLY	7850P-006	42	DHW INLET PIPE	7850P-048
32-1	FAN	7850P-002	43	CERAMIC HEATER	7850P-076
32-2	O-RING	7850P-003	44	GAS VALVE PIPE	7850P-039
32-3	AGM (ACTUATOR)	7850P-004	45	GAS VALVE PIPE	7850P-040
33	SILENCER ELBOW	7850P-036	46	GAS VALVE ADAPTER (STRAIGHT)	7850P-077
34	SILENCER BODY	7850P-035	47	GAS VALVE ASSY W/ PLUG	7850P-078
35	BURNER ASSY	7850P-011	47-1	GAS VALVE	7850P-012
35-1	BURNER HEAD	7850P-007	47-2	GAS VALVE PLUG	7850P-013
35-2	IGNITION ROD BRACKET	7850P-010	48	GAS VALVE ADAPTER (90 DEGREE)	7850P-079
35-3	IGNITION ROD	7850P-008	49	GAS VALVE BRACKET	7850P-080
35-4	BLOWER HEAD BRACKET	7850P-074	50	BOTTOM HEAT EXCHANGER BRACKETS	7850P-028
35-5	OVERHEAT SENSOR (BURNER)	7850P-009	51	TOP HEAT EXCHANGER BRACKETS	7850P-082

Table 27 – Heat Exchanger Replacement Parts